

DELUXE FLOOR BED LENGTH EXTENSION ASSEMBLY INSTRUCTIONS

LET'S ASSEMBLE IN 5 EASY STEPS

1



Lift bed and remove
foot board

2




Open zips under length
extension

3



Line up extension pre-drilled
holes with bed frame holes

4

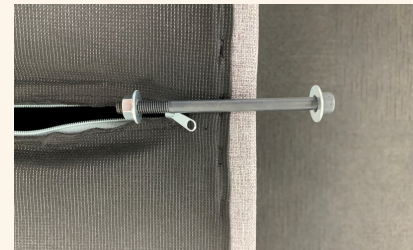

Secure length extension to bed frame
using 4x 12cm long bolts and nuts

5



If required, connect foot board to length
extension using 4x 5cm long hand bolts

ATTENTION

Please read below safety warnings & instructions carefully
prior to using Deluxe Floor Bed Length Extension

- Do not sit on length extension
- Do not lean on length extension
- Using trendelenburg function could damage length extension
- Do not lower bed if length extension is touching the floor

Failure to respect above safety warnings & instructions will
invalidate warranty

For more information, visit our website: premiumlift.com.au

